

NOVA

Remote Control Guide (EMEA)



Table of Contents

OVERVIEW

- 2 Remote Control
- 5 Controlling Your Devices
- 6 Program Remote to Control Your Devices
- 7 Auto Search Procedures
- 8 Setup Keys Punch Through Procedures
- 8 Reset Punch Through Procedures
- 8 Reset Procedures

POWERING UP

- 9 Setting up Remote Control

APPENDIX

- 10 Troubleshooting
- 11 Device Codes: Audio-Amplifier
- 11 Device Codes: Audio-Accessory
- 12 Device Codes: Audio-Receiver
- 15 Device Codes: Television
- 31 Device Codes: Video-DVD

- 40 Declaration of Conformity

COPYRIGHT

©2014 Entone, Inc. All rights reserved. This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

DISCLAIMER

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.


TRADEMARKS

Entone and the tagline "Connecting the Home" are trademarks of Entone, Inc. All other trademarks or registered trademarks belong to their respective owners.

CHANGES

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Entone, Inc. assumes no liability resulting from the use of the information contained herein. Entone, Inc. reserves the right to make changes in the product design without reservation and without notification to its users.

OVERVIEW REMOTE CONTROL

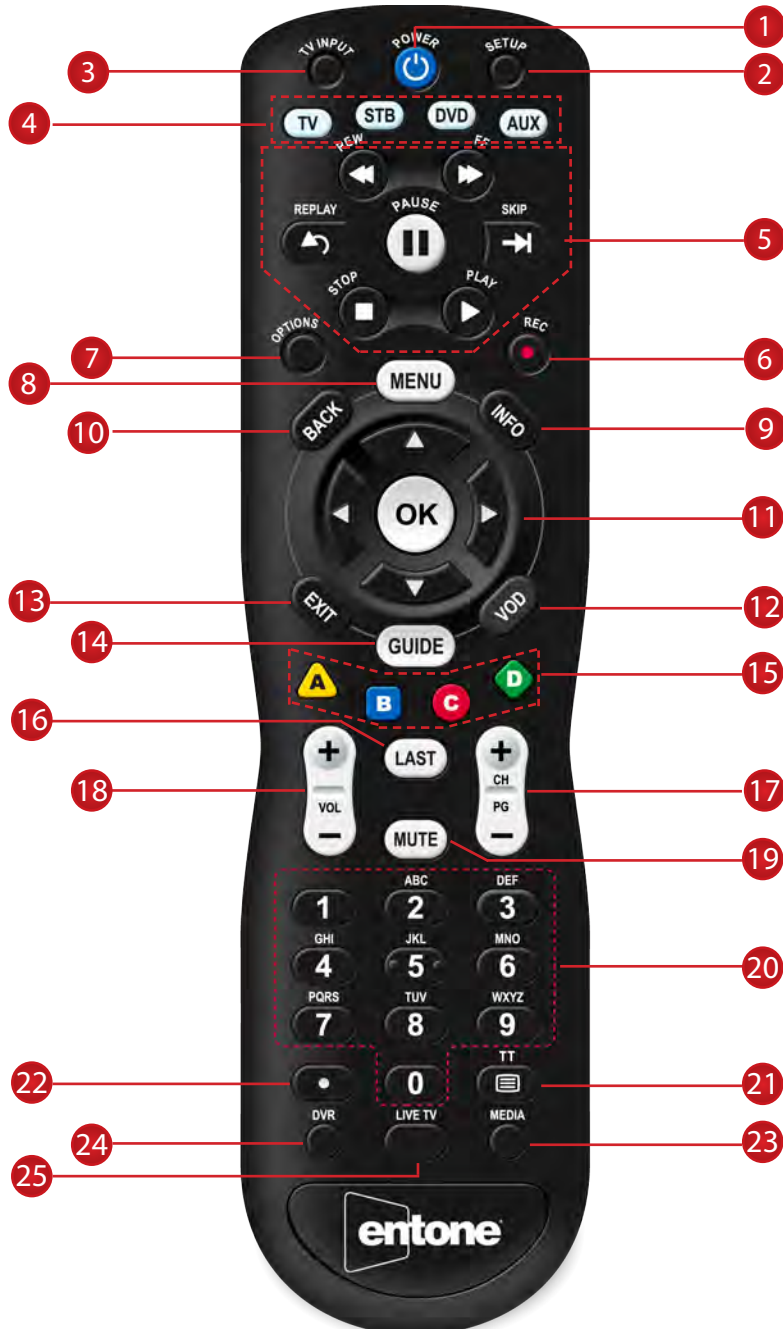

Button(s)	Description
1	POWER Switches the power on/o for the currently selected device Switches STB to power on or standby mode
2	SET UP Set up remote for TV
3	TV/ INPUT Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
4	DEVICE CONTROL TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device DVD: Select to control DVD (if programmed) AUX: Select to control another device (if programmed)
5	TRANSPORT KEYS REPLAY: Goes back approx. 30 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments PAUSE: Pauses video PLAY: Plays video or resumes a paused program STOP: Stops playback of video
6	REC Starts or stops recording a program
7	OPTIONS Provides additional options for certain on-screen menu or highlighted item*
8	MENU Displays on-screen menu or home screen
9	INFO Displays on-screen information about the current TV / VOD / DVR program
10	BACK Goes back one level within menus *
11	NAVIGATION ARROW KEYS: Navigates within the on-screen guide/menus OK: Executes the currently selected menu option LEFT/RIGHT: Rewinds/Fast forwards video
12	VOD Feature enabled by your service provider (contact service provider for details)
13	EXIT Exits the current menu item or back to LIVE TV
14	GUIDE Displays the on-screen program guide

Availability of certain features is dependent on your service provider

Button(s)	Description
15 SHORTCUT	Color-code buttons correspond to features that are enabled by your service provider (contact service provider for details)
16 LAST	Changes channel to the previously viewed channel
17 CH/PG	Changes channel up/down or pages up/down within the on-screen program guide
18 VOL +/-	Increases or decreases TV volume
19 MUTE	Turns TV volume on/off
20 NUMBER KEYS	Allows direct access to specific channels and menu items
21 TT	Toggles Teletext on/off
22 DOT	Used when entering a period in certain channels Displays on-screen keyboard for certain applications
23 MEDIA	Feature enabled by your service provider (contact service provider for details)
24 LIVE TV	Feature enabled by your service provider (contact service provider for details)
25 DVR	Feature enabled by your service provider (contact service provider for details)

CONTROLLING YOUR DEVICES

The Nova remote control can be used to control other devices (e.g. TV) as well. It uses InfraRed (IR) light signals to control other devices. IR signals travel only short distances (10 meters or less), and cannot go through walls or other solid objects. You must point the remote directly at these devices, with no objects blocking the line of sight.



PROGRAM REMOTE TO CONTROL YOUR DEVICES

You can program the Nova to control other devices by

1. Locate the device code for your device in the Device Codes table provided in the Appendix starting on page 11. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7.
2. Turn on your device.
3. On the remote control, press the Device Control key (TV / STB / DVD / AUX) to choose the device mode.
4. Press and hold the "SETUP" key until the LED blinks twice.
5. Enter the five-digit device code for your device. If you perform this procedure correctly, the LED will blink twice. Otherwise, it has a long blink.
6. Press "Power" key. If your device turns off, setup is complete.
7. If your device does not turn off, repeat this procedure using the next code for your device brand.

Record working codes here

TV code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DVD code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
AUX code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

AUTO SEARCH PROCEDURES

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (TV / STB / DVD / AUX) to choose the device mode.
3. Press and hold "SETUP" key until the LED blinks twice.
4. Press number keys "9" - "9" - "1".
5. Press "Power" key.
6. Press "CH +" key repeatedly until your device turns off.
7. Press and hold "SETUP" key until LED blinks twice to save the working code.

KEYS PUNCH THROUGH SETUP PROCEDURES

By default, a key pressed on the remote control is sent to the selected device mode only. The punch through function allows specific keys to be sent to a particular device. (For example, the volume +/- key may need to be sent to the AUX device instead of the TV).

1. On the remote control, press and hold the "SETUP" key until the LED blinks twice.
2. Press number keys "9" - "7" - "8".
3. Press source device mode, e.g. TV.
4. Press keys to punch through, e.g. VOL + / -, MUTE.
5. Press target device modes, e.g. STB, DVD.
6. Press and hold the "SETUP" key until the LED blinks twice.
7. LED has a long blink in case of error.

RESET PUNCH THROUGH PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice
2. Press keys "9" - "7" - "8"
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

RESET PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice
2. Press keys "9" - "7" - "7"
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

POWERING UP SETTING UP REMOTE CONTROL

1. Locate the two AA batteries and remote control in the accessory box
2. To open the battery cover, press down on the battery cover latch and slide it off
3. Insert the AA batteries, matching the "+" and "-" marks on the batteries to the "+" and "-" marks on the interior of the remote control
4. Snap the battery cover back onto the remote control



APPENDIX TROUBLESHOOTING

Problem	Solution
The LED does not blink when a key is pressed	Replace the batteries with two (2) new AA batteries
LED blinks when key is pressed but TV or STB does not respond	Make sure you are aiming the remote control at your device and that you are within 25 feet of the device you are trying to control
The remote control does not control TV functions	Follow "Controlling your tv" on page 5 to program the remote to control your TV
The LED blinks 5 times with each key press	The batteries need replacement. Replace the batteries

DEVICE CODES

Your Nova Remote Control can control many brands and models of devices. The following pages list device codes for many brands of devices. Many brands list more than one code, and you may need to test several codes to find the best match for your devices. Your devices may be supported even if your brand is not shown in the list below. If you cannot locate your brand, or none of the listed device codes works, then you may still use the "Auto Search Procedures" on page 7 to try to locate a suitable device code.

AUDIO – AMPLIFIER	Cyrus	31012	Audio Tuner		
Acoustic Energy	31438	Denon	30272, 32706	Tangent	33306
Acoustic Solutions	31470, 31708	DK Digital	31883	CD	
AS	31470, 31708	Durabrand	31568	Tangent	33306
Cambridge Audio	31730, 31982	eBench	31648	Speaker System	
Cambridge Soundworks	31471	Firstline	31466	Creative	31715
Creative	31471, 31715	Hitachi	33050	Denver	31568
DK Digital	31883	JBL	31177	DK Digital	31883
Eltax	31708	Klegg	31438	Durabrand	31568
Linn	30829	Limit	31381	Logitech	31408
Meridian	30829	Linn	30829	Onkyo	32878
Naim	30829, 31895	Magnat	31177	Teufel	32100, 32322
Philips	30641	Magnum	31601	Speaker System / Amplifier	
Red Star	31381	Marantz	32138, 30641, 30829	Onkyo	32878
Reoc	31381	Naim	31895	Teufel	32100, 32322
Tangent	31708, 33306	Onkyo	33050, 32878	AUDIO - ACCESSORY	
Teufel	32100	Pacific	31601	Audio Amplifier	
Tevion	31601	Philips	30641	Denon	32815
Audio Amplifier		Pioneer	30300, 30823	Sony	30159
Acoustic Energy	31438	Red Star	31381	Audio Receiver	
Acoustic Solutions	31501, 31446, 31466, 31470, 31601	Reoc	31381	Denon	32815
Arcam	30641	Sven	31568	Philips	32881
AS	31501, 31446, 31466, 31470, 31601	Synn	31381	Digital Media Receiver	
Basic Line	31381	Tangent	31708, 33306	Philips	32881
Belson	31381	Teufel	33574	Digital Media Receiver - Audio	
Cambridge Audio	31730, 31982	Tevion	31601	Philips	32881
Cambridge Soundworks	31471	Trice	31568	Digital Media Receiver - Audio	
Creative	31471, 31715	upXus	31446	Philips	32881
		Vieta	31177	Docking System	
		Yamaha	30848, 32592, 30354	Apple	31115
		Audio Receiver		Bose	33079
		Cyrus	31012		
		Onkyo	33050		
		Pioneer	30823		

	32857		32986, 33783
Denver	31389	Pioneer	31459, 33601,
Dual	31390		31284, 31023,
Elta	31390		31123, 31184,
Eltax	32028		32286
Epworth	31622	PJ	31389
Gateway	31567	Pro Vision	31389
Goodmans	31611, 31390,	ProLine	31390
	31389	QONIX	31390
Grunkel	31390	Quadro	31389
Hanseatic	31390	Red Star	31389
Harman/Kardon	33391, 31306	Rotel	30793
HCM	31390	Samsung	32809, 31868,
HE	31389		32714, 32953,
Hiteker	31389		33382, 31295,
Home Tech	31389		32948, 32713,
Industries			33077, 33193,
Jamo	32160		33427, 33051,
JBL	31306		32137
JVC	31374, 32239,	Schneider	31390
	31676, 30074,	Scott	31389
	32030	Sharp	33096
Kenwood	31313, 31570,	Shenzhen KXD	31389
	31293	Multi-Media	
KXD	31389	Silva Schneider	31390
Lenoxx	31611	Sony	31822, 31622,
LG	32197, 31293,		32172, 31827,
	32676, 32932,		33257, 31858,
	32284, 33285,		32578, 31658,
	33995		31882, 31759,
Magnat	31389		31958, 32522,
Medion	32197		33158, 31454,
MEI	31390		31758, 32852,
NAD	32457, 30609		31558, 32486,
New Acoustic	32457, 30609		32475
Dimension		Targa	31293
Nexius	31390	Technics	31765, 31763
Nikkai	31389	Teufel	33296
Onkyo	30135, 31320,	Tevion	31611, 31389
	31805	Thomson	31194
Orava	31389	Tokai	31390
Palladium	31293, 31390	United	31390
Panasonic	31779, 33520,	Universum	31436, 32160,
	33425, 32745,		31390
	32884, 33055,	Venturer	31390
	33536, 31763,	Vieta	31611
	32967, 31766,	Xenius	31390
	33235, 31316,	Xoro	32028
	33062, 31288,	Yamaha	31331, 33504,
	31533, 33309,		30712, 32950,
	31765, 31275		33534, 32406,
Philips	32459, 33127,		33328, 33433
	31831, 31673,	Zenith	31293
	33289, 32341,		
	32289, 33005,		
	32311, 31266,		
	31269, 33008,		

DVD/PVR Combination

Pioneer 31459

DVD/PVR Home Cinema

LG 32932

DVD-R Home Cinema

JVC 32030
Samsung 33051

DVD-R/Digital Terrestrial/PVR Combination

Samsung 32714

DVD-R/Digital Terrestrial/PVR Home Cinema

Pioneer 31459, 32286

DVD-R/PVR Combination

Philips 32341
Sony 32172

Hi-Fi System

Aiwa 30121, 31405,
31827, 32309
Arcam 31984
B & O 30799
Bang & Olufsen 30799
Bose 31841
Denon 32987, 31434,
30004, 30771,
33530

Epworth 30121, 31405,
31827, 32309

Grundig 31189
JVC 30074, 31374
Kenwood 30262, 31313,
31569

LG 32284, 31293,
32197

Onkyo 32451, 33188,
31805, 33737,
30135

Panasonic 33712, 31765,
30367, 31288,
31308, 31533,
31763, 31766

Philips 31269, 31189
Pioneer 33422, 31184,
31143

Samsung 32713
Sharp 30262

Sony 31827, 32486,
31258, 33124,
31058, 31441

Technics 31308, 31765
Thomson 31354

Yamaha 32455, 32406,
30712, 30176,
33602

Internet Radio

Denon 33642
Integra 33860
Onkyo 33860, 33682
Yamaha 33580

LCD TV

Samsung 31295, 32714,
32809

MD

Aiwa 30121
Epworth 30121

Mobile Audio

Panasonic 33685

Portable CD

Panasonic 31779

Satellite

B & O 30799
Bang & Olufsen 30799

Satellite Radio

Arcam 31214

Sound Bar

Yamaha 33328, 32950

Sound Bar DVD Home Cinema

Philips 32311

Speaker System

Bose 31933, 31229
Philips 32459
Pioneer 31459, 33601
Sony 33158, 31933

Television

B & O 30799
Bang & Olufsen 30799

TV/PVR Combination

Samsung 31295, 32714

TV/VCR Combination

B & O 30799
Bang & Olufsen 30799

VCR

B & O 30799
Bang & Olufsen 30799

TELEVISION

Akura 00009, 01687
Alba 00009, 00037
Amstrad 00009
Anitech 00009
B & O 00565, 00620
Bang & Olufsen 00565, 00620
Beaumark 00178
Beko 00714, 00715
Beon 00037
Brionvega 01608
Bush 01556, 00009,
00037, 00374,
00698

Cascade 00009
Centrex 00826
Conia 01687
Contec 00009
Crown 00009, 00037
Daewoo 00009, 00037,
00374, 00499

Dayton Audio 00009
Denver 00587
Dixi 00009
Elfunk 01208
Elta 00009
Emerson 00361
Erisson 01682
Ferguson 00335
Fidelity 00361
Finlandia 00208
Fisher 00208
GoldStar 00178
Goodmans 00037, 00499
Graetz 00714
Grundig 00191, 00195,
00580, 00587,
00706, 02125

Havermy 00093
Hinari 00009, 00037
Hisense 01363
Huanyu 00374
Indiana 00037
ITT 00361
JVC 00606, 00653
König 00037
LG 01840, 01423,
00714

Loewe 00512
MAG 01687
Marantz 00556
Matsui 00208
Medion 01248
Memorex 01037
Metronic 00625
Mitsubishi 00108, 00512
Electric

Mx Onda 01687
Myryad 00556
Mystery 03047
NAD 00037
NEC 00170
Neon 02673
New Acoustic 00037
Dimension
Nordmende 00560
Otic 01687
Panasonic 03825, 00226,
00650
Philips 03678, 03614,
02485, 00037,
00556, 00639,
01798
Phocus 01652
Pilot 00706
Pioneer 00679
Polaroid 01687
Pro Vision 01324
Quelle 00037, 00512
Radiola 00037
Relisys 00865
Reoc 00714
Revox 00037
Salora 00361
Samsung 02051
Sanyo 01208, 00208
Schneider 01137
SEG 01037
Sharp 00093, 01393
Siemens 00191
Sliding 00865
Sony 00651, 01505
Soundwave 00037
Sunkai 00865
Sysline 00037
Tatung 01556
TCC 00826
TCL 03047, 00706
Teac 00037, 00698
Technics 00650
Technisnon 00714
Technosonic 01326
Tevion 01687
Thomson 03047, 00560,
00625, 01882
Thorn 00499
Toshiba 01508, 00035,
00650, 01356
Trio 01687
TVTEXT 95 00556
Universum 01037
Videocon 00508
Vivax 01308, 01326
Wharfedale 01556

Yoko 00037
YU-MA-TU 00037

3D Connected LCD/Digital Terrestrial/Cable Combination

Arçelik 03433
Grundig 03433, 02890
Loewe 01884
Panasonic 03825, 01636
Sharp 02951, 01659

3D Connected LED/Digital Terrestrial/Cable Combination

Panasonic 01636, 03825
Philips 02800, 03614, 03678, 02768, 01887
Toshiba 03323, 01508, 02676

3D Connected LED/Digital Terrestrial/Cable/PVR Combination

Panasonic 01636, 03825
Philips 03678, 02800, 03614

3D Connected LED/Digital Terrestrial/PVR Combination

LG 01840
Sharp 02951, 01659, 02676, 03287
Sony 02778

3D Connected LED/SAT/Digital Terrestrial/Cable Combination

Sharp 01659, 02951

3D Connected LED/SAT/Digital Terrestrial/Cable/PVR Combination

Arçelik 03433
Grundig 03433
Panasonic 01636, 03825
PEAQ 03649
Philips 03678, 02800, 03614
Sharp 02951, 01659
Sony 02778
Thomson 03649, 03047

3D Connected Plasma/Digital Terrestrial/Cable/PVR Combination

Panasonic 01636, 03825

3D Connected Plasma/SAT/Digital Terrestrial/Cable/PVR Combination

Panasonic 01636, 03825
Samsung 02051

3D Connected Plasma/SAT/Digital Terrestrial/PVR Combination

Panasonic 01636, 03825

3D LCD

Philips 03678
Sony 02778

3D LCD/Digital Terrestrial Combination

Bush 02673, 02676
Celcus 02676
Technika 02676

3D LCD/Digital Terrestrial/Cable Combination

LG 01840
Samsung 02051

3D LCD/Digital Terrestrial/Cable/PVR Combination

Grundig 03433, 02890, 02663, 02053

3D LCD/Digital Terrestrial/PVR Combination

cello 02673
Finlux 02676

3D LED/Digital Terrestrial Combination

Bush 03589
Grundig 03433
Hitachi 02676
Isis 02676
Samsung 02051, 03975
Sandström 03047

3D LED/Digital Terrestrial/Cable Combination

Medion 02676

3D LED/Digital Terrestrial/Cable/PVR Combination

Andersson 02676
cello 02673
PEAQ 03649
Samsung 02051, 03975
Thomson 03047, 03649, 03971, 02675

3D LED/Digital Terrestrial/PVR Combination

Finlux 02676
Orion 02676, 02005

3D LED/SAT/Digital Terrestrial/Cable Combination

LG 01840
Samsung 02051, 03975
Sony 02778

3D LED/SAT/Digital Terrestrial/PVR Combination

Panasonic 01636, 03825

3D Plasma

LG 01840

3D Plasma/Digital Terrestrial Combination

LG 01840, 02182

3D Plasma/Digital Terrestrial/Cable Combination

Samsung 02051, 03975, 00812, 01619, 02953

3D Plasma/Digital Terrestrial/Cable/PVR Combination

Samsung 02051

3D Plasma/PVR Combination

Panasonic 01636, 03825

3D Plasma/SAT/Digital Terrestrial/Cable Combination

LG 01840

3D TV

Andersson 02676
Arçelik 03433
Bush 03589
cello 02673
Daewoo 00661
Grundig 03433
Hitachi 02676
Isis 02676
LG 01840, 01423
Medion 02676
Panasonic 01636, 03825
PEAQ 03649
Philips 02800, 03614
Samsung 02051, 03975
Sharp 02951, 01659
Sony 02778
TCL 03649

Thomson 03649
Toshiba 03323

Audio Amplifier

Myryad 00556

Audio Receiver

Philips 00556

Cable

Changhong 03434
Panasonic 03825

Connected LCD

Arçelik 03433
Sony 02778

Connected LCD/Digital Terrestrial Combination

Toshiba 01508

Connected LED/Digital Terrestrial Combination

Bush 02676
Samsung 02051, 03975

Connected LED/Digital Terrestrial/Cable Combination

LG 01840

Connected LED/Digital Terrestrial/Cable/PVR Combination

Vestel 02676

Connected LED/SAT/Digital Terrestrial/Cable Combination

LG 01840

Connected LED/SAT/Digital Terrestrial/Cable/PVR Combination

LG 01840

Connected TV

Akai 02676
LG 01840
Panasonic 01636, 03825
PEAQ 03649
Philips 03614
Samsung 02051
Sharp 01659
Sony 02778

DBS

Samsung 02051

Digital Terrestrial

Acer 03630
Akura 02289
Beko 02125
Changhong 03434
Palsonic 03480
Panasonic 03825
Philips 02800, 03614
Technika 01865
UMC 01849
Xoro 03067

Digital Terrestrial/Cable/PVR Combination

Salora 02676

DLP

Daewoo 03110
Philips 01744, 01506, 02374
Samsung 00812, 01249, 01312
Sony 01651

DVD

Kendo 01037
Philips 02371

DVD/PVR Combination

Technika 02426
UMC 02426

HDTV

Hitachi 01585, 01576, 01667
JVC 01601
Panasonic 00650
Pioneer 00679
Samsung 00812

Hi-Fi System

Panasonic 03825

LCD TV

Acer 01339, 03630
Acoustic 01727, 01545, 01585, 01865, 01667, 01523, 02279, 01037, 01149
Solutions 01149

AEG

01163, 01667, 02239, 01149, 01585, 02530
Akai 02676, 01308
Akira 02241, 02333
Akura 02289, 03268, 01667, 01363,

Alba 02676, 03067, 01585, 03005, 03790, 02561
Amstrad 01163, 01149, 01667
Andersson 01149, 01163
AOC 02214, 01589, 03790, 00625
Arçelik 03262, 02663
arctic 01652
Art Mito 01667
AS 01727, 01545, 01585, 01865, 01667, 01523, 02279, 01037, 01149

Asus 03340
Audiosonic 01308
Autovox 01667, 01163, 01585

Axdia 02799, 02719, 02165
Baier 02165, 02239
BBK 01741, 01523, 02530

Beko 02125, 01308, 01652, 02200, 00714
Belson 02868, 02241, 01149, 01163

Bensten 01326
Blaupunkt 03465
Blue Sky 01363, 01709, 01324, 01652

BlueDiamond 03465
Bork 01363
Brimax 01709
BuBuGao 01741, 01523, 02530

Bush 03790, 02676, 01682, 02214, 01149, 01652, 01687, 01667, 01983, 03964, 02530, 03589, 01585, 01589, 02719, 01308, 01865, 02059, 02125

Cameron 01523
Cat 01682
Cathay 01727
cello 02673, 01770
Changhong 03434
Chimei 01852, 01666
CHL 03067

Clatronic	01163		01149, 01308,		01305, 02741,	Onyx	01709		02474		01298, 02032
CMX	02868, 02832,		02426		00178, 02065,	Orion	02005, 02000,	Sens	01865	Thes	02947
	02799, 03067	Gorenje	02676, 01585		02358, 00037,		02108, 02007,	Sharp	01659, 02951,	Thomson	00625, 02675,
Conia	02032, 02410	Graetz	00714, 01163	Lifetec	02001		01196, 00443,		01393, 03287,		01882, 03047
CPTEC	00625, 01363	Gran Prix	02333	Linsar	02676		02001, 01667		01586, 01587,	Tokai	03480
Daewoo	00661, 01376,	Grandin	00865, 01298	Lodos	01149	Palsonic	03480		02676, 02214,	Toshiba	01508, 02775,
	01661, 02246	Grundig	02890, 01223,	Loewe	01884	Panasonic	01636, 00650,		00093, 03119,		02676, 02598,
Daytek	01376		03433, 02663,	Logic	01585		01650, 03825	Silva Schneider	02333		02732, 03323,
Denver	01770, 02197,		03262, 01308,	Logik	02486, 03005,	Philips	02800, 01887,	Sinudyne	01667		00508, 01652,
	03067		02125, 01523,		03428, 01037,		01506, 01798,	Sky Media	01376		02108, 01737,
DGM	02718, 02239,		01645, 02200,		02530, 03505		00639, 02813,	Sliding	00865	Tosonic	01508
	02059, 02284		02239, 02127,	Logix	03465		01744, 03614,	Sogo	01376	TRANS-	00865, 02023
Digatron	00037, 02890		01376	Lumatron	02023		02680, 01867,	Sonix	01376	continents	
Digihome	01149	Haier	02214, 03790	Luxor	01163, 02676		02768, 00556,	Sony	01825, 02778,	UMC	02426, 02168,
Digitek	01709	Hannsprece	02786, 03430,	Maqma	01709		02986		01551, 01625,		02059, 03465,
Digitrex	03067, 03194		02818, 01776	Marks &	02246, 01770		01308		01651, 02585		01849, 02106,
DL	01326	Hanseatic	00808	Spencer			01457, 01260	SOVOS	02239		02165
DMTech	02001, 03480	Hantarex	02197	Mascom	01556		01506	SR Standard	01709	Unicorn	03465
Donghai	02832	Harwa	01196	Matsui	02486, 01666,		01523, 01687,	Strong	01163	United	02799, 03233,
Dual	01149, 01163,	HCM	01196		02279, 01667,		02125, 01720,	Sungoo	02037, 01248		03480, 02530,
	02241, 02032,	Hisense	02037, 01363		02637, 02676,		01741, 01645	Sunkai	00865		02200, 02663
	01037, 01585	Hitachi	02676, 01585,		02165	ProLine	01667, 01545,	Sunstech	02530	Unitek	01709
Dyon	02457		02207, 01576,	Medion	02676, 01248,		01727, 01376,	Superior	01585	Universum	01149, 01163
Easy Living	01666, 01709,		01667, 02214,		00808, 01585,		02135, 01163,	Supratech	02208	V7 Videoseven	01376, 01666
	01308, 02005		01149, 01163,		01149, 01741,		02223	SVA	00587, 00865	Venturer	01545, 01727,
Electrolux	01585		02005, 02127,		02719, 01667,	Prosonic	01865, 01376,	Sweex	02284		01865, 03005
Elonex	01776		02000, 02279		02001, 01376,		01196, 01770,	Swisstec	01776, 02165,	Vestel	01585, 01163
Emerson	01394	Höher	00865		01163, 01308,		02125, 02197,		00865, 01376,	Videocon	02548
e-motion	03465, 01645,	Hugoson	01666		01556, 02279		00714, 01163,		01849	Videoseven	01376, 01666
	01709, 00865	Humax	01295	Memorex	01687		01308, 01585,	Symphonic	01595	Viewpia	02284
Essentials	02486	HYD	01376	Metz	01533		01709, 03480	Tatung	01720, 01248	Vivax	01308, 01709
Eurovision	01163, 01149	Hyundai	00865, 01376	Micromaxx	02001	Q.Media	02339	Taurus	02197	Voxson	02197
Evesham	01248	IIsonic	01376	Mikomi	01149, 01585,	Quadro	01149	TCL	02675	Walker	01149, 01585,
Technology		i-Joy	02713		00744, 01308	RefleXion	02165	TCM	00808, 01308,		02138, 01667,
Evotel	02561, 02559,	Imperial	02339	Minerva	01248	Relisys	01741, 01376,		02001		02676
	03589	Inno Hit	01667, 01163,	Mirai	01666, 01852		01645	Teac	02168, 03005,	Watson	01376, 01248
Fenner	01667		01585, 01149	Mivar	00609		01163		01645, 02714	Wegavox	01149, 01667
Ferguson	02339, 02637,	iPure	01376	MyCom	01376	Salora	02197, 02239,	Technica	03465	Wharfedale	01983, 02212
	03455	ITT	02675, 02125,	Myrica	01666, 01298		02001, 02125,	Technika	02426, 01865,	World-of-Vision	02001, 00865
Finlux	01667, 02676,		02676, 01523	NAD	00865		02676		01983, 01667,	Xenius	01667
	01248	ITV	01798	NEC	01585	Samsung	02051, 00812,		02106, 02212,	Xoro	01196
Firstline	01363	JGC	01709	Neon	02673, 01709		02094, 02103,		03005, 03465,		
Fisher	01585	JMB	02676, 02426	Neovia	00865, 01376		02953, 01458,		03067		
Foehn & Hirsch	02391	JVC	02118, 01818,	New Acoustic	00865		01312, 01619,	Techno	01585	LCD/Blu-ray Combination	
Fujitsu Siemens	01666, 01298,		00653, 02943,	Dimension			01249, 01235,	Technosonic	02032, 00499,	Acer	03630, 01339
	00808, 01248		01601, 01774,	Nikkei	02197		02532, 00587,		00625	Acoustic	01667, 01865,
	01817, 01595,		02714, 03874	Nordmende	02548, 02331,		00009		01709, 02032	Solutions	01585, 02279
	01394, 01666	Karcher	02125		01413, 02332		01585, 02676,	Techvision	02676, 01163,	Andersson	01585, 02676
Gericom	00865, 01298	Kendo	01585, 02676,	Novex	01523	Sanyo	01208, 03096,	Techwood	01667	Ansonic	02799
Gold	02023, 01770		01149	Odys	02799, 02719,		00208, 01149,		01376	AOC	01589, 02214,
Goodmans	01523, 01687,	Kenmark	02637		02165		01362, 02279	Teckton	01376		03790
	01727, 02165,	Kenstar	02548	OK.	02676, 03434		02676	Teco	01523	Art Mito	01585
	01163, 01376,	Keymat	01326	OKI	02676, 01308,	Schaub Lorenz	01137	Telefunken	02676, 00808	AS	01667, 01865,
	02223, 01645,	Level	02023		01667	Schneider	01137	Teletech	01149		01585, 02279
	01667, 01682,	Lexsor	01196	Olidata	01376	SEG	01163, 01149,	Tesco	02426	Asus	03340
	01720, 02053,	LG	01840, 02182,	Onn	01709, 02125,		01523, 02673,	Tevion	01248, 02023,	Autovox	01667, 02676
	02393, 02676,		01423, 01842,		01667, 02279		02719, 01037,		02125, 03465,	Awa	02530
							02125, 02138,		02241, 02339,	Baird	02559, 02212

Beko	02125, 02663, 01308, 02279		02214, 02127, 02005, 02279,	Saba Saivod	02676, 01585 01667	LCD/Blu-ray/Digital Terrestrial/Cable Combination	CMX	02868	Matsui	02486, 02561
Belson	02032, 02241, 02714, 02868, 01667	Humax Hyundai	02000 01295 02676	Samsung	02051, 00812, 01619, 02953, 02103, 02532, 01458, 01312, 02094	Samsung Sony	Grundig	02051 02778	Nevir NPG Polaroid Q.Bell	02799, 02474 03434 03589 02561
BenQ	01523	Inno Hit	02676, 01667, 01585, 02279, 01308	Schneider	01585, 02676	LCD/Digital Terrestrial/Cable Combination	Hannspree	03430	Schaub Lorenz	02676, 03268
Blue Sky	01149		02125, 02675, 02676, 01523	SEG	02125, 02673, 01523, 02165, 02474, 02719	Acer	Orion	02676	Seeltech	03268
Brandt	01585, 02676, 01667	ITT	01818, 02118, 02714, 03874, 02676, 00653	Sharp	01659, 02951, 03287, 02676, 01586, 02214, 01393	Acoustic Solutions	Telefunken	02676, 01585, 01667, 02799	Sencor	03067
Celcus	02676, 01585	JVC	01585, 02676 02548, 02331	Silva Schneider	02197, 02125	Andersson	Walker	02676	Sharp	02676, 01659
Clarity	01720	Kendo	02799	Sinudyne	02676	Arçelik	LCD/Digital Terrestrial/PVR Combination	02676	Shinelco	02530
Crypton	01667	Kenstar	02373	SR Standard	02799	AS	AEG	02530	Sogo	03067
Cyberpix	01667	Lenco	02182, 01840, 02741, 01423, 02065, 01842	Strato	02032	Bush	Akura	02289, 03268, 01667, 01585	Sunstech	02530
Daewoo	01849, 02125, 02246, 02333	Level	02741, 01423, 02065, 01842	Sungoo	02037	Ferguson	Alba	02676, 03268, 01667, 01585	TCL	02675
Digihome	02676, 01667	LG	01585, 02279 02561, 02676	Sunkai	01523	Finlux		02676, 03067, 01585, 02561, 03790, 03005, 01667, 01865	Technical	02676
Dikom	02799	Linsar	02065, 01842 02676, 01667, 01585, 02279	Tatung	01720	Gold	Belson	02714, 02868	Technika	02426, 02197, 03465, 02676
Dual	02241, 02197, 02032	Magnum	02023	Taurus	02197	Goodmans	Bluetech	02799	Teufel	02676, 01667
Dyon	02457, 02799	Majestic	02799	Tech Line	01585	Gorenje	bogo	02676	Tevion	03268
Easy Living	02005, 02023	Mascom	02125	Technical	02676, 01667	ITT	Bush	02741	Thes	02947
ECCG	02197, 02125, 02165	Matsui	02486, 02279, 01667, 02165, 02561, 02676	Technosonic	02032	Kendo		02561	Thomson	02675
Essentials	02486	Mikomi	01585	Techwood	01667, 02676	LG		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Tokai	02832
Evesham	01667	Minerva	01248	TELE System	02676, 01585, 01667, 02530	Luxor		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Toshiba	01508
Technology		Mivar	00609	Terris	01667	Metz		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	LCD/DVD Combination	
FairTec	01585	Murphy	02005, 02673, 02246	Tevion	02241, 02032, 02125, 02339, 02373, 03268, 02289	Minerva		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Acoustic	01545, 01865,
Finlux	01667, 02676, 01585	Nordmende	02548, 02331, 02676, 02332, 01149, 01585, 01667	Tucson	02676	Mirai		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Solutions	02279
Foehn & Hirsch	02391	Odys	02719, 02799, 02165, 02530	United	02799, 03233, 03480, 02530, 02663, 01523, 01770, 02125, 02279	OK.		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Akai	02676, 01865, 02197
Funai	01817	Onei	01667	Ultravox	01585	Orion		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Akura	02289, 01770, 02059, 02239
Gold	02023	Onn	02125, 01667, 02279	Videocon	02548, 02331	Philips		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	AS	01545, 01865, 02279
Goodmans	01667, 01585, 01163, 02393, 01523, 02053, 02223, 02127, 02165, 02676, 01645, 01687, 02214	Palsonic	03480	Visual	02106	Philips		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Conia	02410
Gorenje	02676, 01585	Panasonic	01636, 03825	Innovations	01585	Sony		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Currys	02486
Graetz	01585, 01163, 01667, 01149	Polaroid	01645, 01720, 01523, 02676, 03589	Wharfedale	01983, 02212, 01667	Samsung		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Essentials	02676
Grundig	03433, 02890, 02663, 02125, 02239, 01523, 01667, 02127, 02053, 01223, 01645, 02200, 02561, 02676	ProLine	01667, 01585, 02676, 02135, 02223, 02393, 02637	Xenius	01585, 01667, 02676	Sanyo		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Dantax	02676
Haier	03790, 02212, 02214, 02530, 01983	Quadro	02223, 02393, 02637	Zepto	01585	Schaub Lorenz		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Denver	01770, 02197, 03067, 02239, 02197, 02241, 02279
Hannspree	02786, 03430, 02818	Red	01849, 02125, 02279, 02663, 02676, 03480	Ziggo	01818	Sharp		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Dual	02197, 02241, 02279
Hisense	02037					SilverCrest		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	D-Vision	02197
Hitachi	02676, 02207, 01585, 01667					Sony		02214, 03790, 03964, 03005, 02673, 02676, 03589, 01667, 02053, 02125, 01645, 01983, 02530, 01585, 01589, 01687, 02059, 02127, 02212, 02241, 02457, 02719	Finlux	02676

	02197, 02279, 01545, 01865, 02001, 02676	Digihome	02059, 02284	Saga	02197	e-motion	02426	Sony	02778	Rolsen	03067, 03434	
		Digimate	02676	Salora	02197, 02239	Enox.	02673			Salora	02676, 03067	
		diVision	02239	Sansui	02832	Essentials	02486	LCD/SAT/Digital Terrestrial/ PVR Combination		Samsung	02051, 03975, 01619	
Q.Media	02339	DMTech	02197, 02239	Sanyo	02676, 01585, 02279, 03096, 01667	Evotel	02559, 02637	Panasonic	01636	SEG	02673, 03434	
RefleXion	02239		02001, 01849, 03480			Ferguson	02426, 02676			Sharp	01659, 02951, 02676	
Rolsen	02001			Schaub Lorenz	02197, 02279, 01585, 02289, 02676, 01667, 02125, 01149, 02001, 02241, 03268	i-Joy	02868	LED TV		Sony	02778, 01825	
Schneider	02676	Dyon	02457			JMB	02676	Acer	03630	TCL	03047	
Sens	01865	Easy Touch	02059			Logik	02486, 03005, 03428, 01585, 03505	Akai	01523, 03067, 02676	Thomson	03971, 03047	
Sunstech	02001	ECG	02197, 02125					Alba	03587, 02676	Toshiba	03323, 01508, 02676	
Sweex	02284	Ferguson	02676, 03005, 02279, 02426, 03455, 02053, 02339, 02637, 01585	SEG	02719	Marks & Spencer	02673	Andersson	02676	United	03233	
Technica	02168			SOVOS	02239	Medion	02719, 02676	Audiosonic	03067	Videocon	03296	
Telefunken	02676, 02239			Supratech	02208	Neon	02673, 02246	Axdia	02457			
Thomson	02675, 03047			Swisstec	02106, 01849, 02059	OK.	02676	BBK	02530			
Toshiba	02732, 02676, 02775, 03323	Goodmans	02127, 01687, 02676, 02426	Tauras	02197	OKI	02676, 01667, 02125, 02947, 01585, 02279	Blaupunkt	03465	LED/Blu-ray/Digital Terrestrial/Cable Combination	Polaroid	02676
Tosumi	01770			Teac	02168, 01645	Saba	02676	BlueDiamond	03465			
UMC	02426, 02106, 02168, 01849, 02059, 03465	Gran Prix Grundig	02197, 02333 03433, 02663, 02239, 02127, 02676	Technika	02426, 02197, 02106, 02168, 01865, 01983, 01849, 02059, 01667, 02212, 03005, 02676, 02032, 02125, 03465, 02719	Sharp	02676	BuBuGao	02530			
United	01770, 02279					Soundwave	02246, 02673	Bush	03589	LED/Digital Terrestrial Combination		
Viewpia	02284	Haier	01983			Technical	02676	Celcus	02676	Acer	03630	
VisionPlus	02426	Hantarex	02197			TELE System	02676, 02530	cello	02673	Acronn	02561	
Xomax	01770	Hitachi	02676, 02279, 02000, 01667			Tokai	02832	Changhong	03434	Akura	02289	
Xoro	03067					UMC	02426, 03465	CMX	03296, 02868	Alba	03587, 02676	
		Hyundai	01770, 02676			VD-Tech	03067, 02799	Dantax	02676	Autovox	02676, 01585, 02279	
		Ikasu	02246			VisionPlus	02426	DGM	02718			
LCD/DVD/Digital Terrestrial Combination		Ingo Devices	02239			Walker	02676, 01667, 02279, 01585	Dual	02676	Axdia	02457, 02530	
AEG	02197, 02457, 02239, 02530	Inno Hit	02676, 02279	Techwood	02676			Dyon	02530	Dicra	03233	
Agfaphoto	02719	iPure	01376	Tesco	02426			F&U	02676	Funai	01817	
Agora	02279	JVC	02714, 03874, 02676	Tevion	02426, 02241, 02339			Finlux	01817	Funai United	02676	
Akai	02676, 01523, 02197, 02832	Kenmark	02637, 02393	Trevi	02474			Funai	02676	Grundig	03433, 02663	
Akira	02333, 02457	Küppersbusch	02676	TVE	02239			Haier	02530	Haanspree	03430	
Alba	02676, 03067, 03005, 01865	Linetech	02676	UMC	02106, 01849, 02426, 02168, 02059, 03465			Hitachi	02676	Hitachi	02676	
Amitech	01849	Linsar	02676, 02279			JVC	01818	Isis	02676	GoGen	02676, 01585	
Axdia	02719, 02799, 02165, 02530	Luxor	02676	Venturer	01545, 03005, 01865	LG	02182	Jay-tech	03067	Grunkel	01523	
		Marks & Spencer	02246, 02673, 01770			Panasonic	01636	JTC	03067	Jay-tech	03067	
		Matsui	02486, 02279, 02676	Wharfedale	01983			JVC	03874, 01601	JVC	03874, 02676	
Azuki	02239							LG	01840, 02741	Linsar	02676	
Baier	02239, 02165	Medion	02719, 02676, 01667, 02279	LCD/DVD/Digital Terrestrial/ Cable/PVR Combination				Linsar	02676	Medion	02676	
Bauer	02197			Akai	02676, 02832			Minerva	01248	Miia	02868	
Beko	01545, 02239, 02279	Murphy	02673, 02246	Blaupunkt	03465, 02426			Panasonic	01636, 03825	Mystery	03296	
		Neon	02673, 02246	Dyon	02457			Samsung	02051	Odys	02457	
Belson	02241, 02714, 02032	Nevir	02474	Technical	02676			Sony	02778, 01825, 02585, 01625	OK.	03802, 03434, 02676, 03047	
Brandt	02676	Nikkei	02676, 02197, 01585, 01667	Xoro	03067			Toshiba	01508			
Bush	03005, 01983, 02059, 02127, 02241, 02719	Nordmende	02001, 02548 02719, 02799							Orion	02676	
		Odys	02676, 03434	LCD/DVD/Digital Terrestrial/ PVR Combination						Panasonic	01636, 03825	
		OKI	02676, 02279	Baird	02559					Panavideo	03825	
Celcus	02676	Onn	01770, 02279	Blaupunkt	02426, 03465					PEAQ	03649	
cello	02673, 02246, 01770	Orion	02000	BlueDiamond	03465, 02426					Philips	02800, 03614, 02768, 03678, 01887, 01867, 02374	
Daewoo	01849, 02333	Pro Vision	02197	cello	02673						02676, 03067, 03296	
Denver	01770, 03067, 02239	ProLine	02135, 01545, 02676, 02637	CMX	02868					Polaroid	03296	
DGM	02239, 02718,	Reoc	02197	Digitrex	03194, 03067					Prosonic	02676	
				ECG	02197						Salora	02676, 02197

Samsung 02051, 03975
 Schaub Lorenz 02676
 Sinudyne 02676
 TCL 03047
 Thomson 03047, 03649, 03971
 Toshiba 03323, 01508, 02676

**LED/Digital Terrestrial/
 Cable/PVR Combination**

CHL 03067
 DNS 03434
 Dyon 02530
 GoGen 02676
 Grundig 03433, 02890
 Hannspree 03430
 Hitachi 02676
 Nordmende 02676
 OK. 03047
 Sharp 01659, 02676, 02951
 Telefunken 02676

**LED/Digital Terrestrial/PVR
 Combination**

Belson 03296
 BlueDiamond 02426, 03465
 Bluetech 02561
 Bush 03589, 02676, 03964, 03587
 CMX 02868, 03296
 Continental 02530
 Edison
 Dikom 02561
 Finlux 02676
 Haier 02530
 Hitachi 02676
 i-Joy 03067
 Isis 02676
 Kogan 03296
 Logik 03802, 03428, 02486, 03005

Miia 02868
 Nevir 02676
 NPG 03434
 Polaroid 03296
 Q.Media 02799
 Saba 02676, 02947
 Seleccion 03296
 Sencor 03067
 Sogo 03067
 Sunstech 02676
 Walker 02676

LED/DVD Combination

Blaupunkt 02426

Curtis 02559
 Dual 02676
 e-motion 02426
 Finlux 02676
 Kogan 03296
 Lenco 02676
 Polaroid 02676
 Q.Media 02339
 Shivaki 02197
 Technika 02426
 Techwood 02676
 Toshiba 03323, 02676

**LED/DVD/Digital Terrestrial
 Combination**

Akai 02676, 03067
 Alba 03587
 Axdia 02457
 Bush 02676, 03587
 Celcus 02676
 Digihome 02676
 Jay-tech 03067
 JTC 03067
 Luxor 02676
 Nikkei 02279
 Odys 02457
 Polaroid 02676, 03296
 Salora 02676, 02197
 Sencor 02197, 03067
 Toshiba 03323, 01508, 02676

**LED/DVD/Digital Terrestrial/
 Cable Combination**

OK. 03802
 Prosonic 02676

**LED/DVD/Digital Terrestrial/
 Cable/PVR Combination**

Dual 02676
 Lenco 02676
 Mascom 02197
 Orion 02676
 Sharp 02676
 Sunstech 02676
 Technical 02676

**LED/DVD/Digital Terrestrial/
 PVR Combination**

Akai 03067
 Autovox 02279
 BlueDiamond 02426, 03465
 cello 02673
 CMX 02868, 03296
 Curtis 02559
 e-motion 02426
 Inno Hit 02676, 01667

Linsar 02676
 Logik 03802, 03005, 02486, 03428
 mp man 03296
 Sandström 03802, 02197, 03047
 Telefunken 02676
 Toshiba 03323, 02676
 Videocon 03296

**LED/DVD/SAT/Digital
 Terrestrial/Cable Combination**

SEG 02673, 03434

**LED/DVD/SAT/Digital
 Terrestrial/Cable/PVR
 Combination**

Blaupunkt 03465, 02426
 cello 02673
 Philips 02800, 03614, 03678
 SEG 02673

**LED/DVD/SAT/Digital
 Terrestrial/PVR Combination**

Panasonic 01636
 SEG 02673, 03434

LED/PVR Combination

DGM 02718

**LED/SAT/Digital Terrestrial
 Combination**

Grundig 03433, 02890, 02663
 Orion 02005
 United 03434

**LED/SAT/Digital Terrestrial/
 Cable Combination**

Grundig 03433, 02890, 02663
 Sony 02778
 Toshiba 03323, 02676

**LED/SAT/Digital Terrestrial/
 Cable/PVR Combination**

Changhong 03434
 CMX 02868
 LG 01840
 Metz 01533
 NPG 03434
 OKI 03434
 Sharp 02951, 01659, 02676, 03287
 Vestel 02676

**LED/SAT/Digital Terrestrial/PVR
 Combination**

Grundig 03433, 02890, 02663
 OKI 03434
 Q.Bell 02561
 SEG 02673, 03434

Mobile LCD

Digatron 00037

Plasma TV

Advent 01694
 AEG 01163
 Airis 01694
 All Tel 00865
 Amstrad 01163
 Andersson 01163
 Baird 01196
 Basic Line 01163
 Beko 00808, 01308
 Black Diamond 01163
 Blue Sky 01363
 Cat 01682
 Changhong 03434
 Conrac 00808
 CPTEC 01363
 Cytronix 01298
 Daewoo 00661, 00865
 Dantax 01163
 Dual 01163, 01667
 Fenner 01163
 Finlux 00808, 01585
 Firstline 01363, 00808, 01308
 Force 01149
 Fujimaro 00865
 Fujitsu Siemens 01298, 01163
 Funai 01394
 Gericom 01298, 00865, 00808
 Goodmans 00808, 01163, 01308, 01585
 Graetz 01163
 Grandin 00865
 Grundig 01223
 Grunkel 01163
 H & B 00808
 Hanseatic 00808
 Hantarex 00865
 Harsper 00865
 Hisense 01363, 02037
 Hitachi 01576, 02207, 00679
 Höher 01163, 00865
 Hyundai 01694, 00865
 Inno Hit 01163

Innowert 00865, 01298
 iPure 01694
 JVC 02943, 00653, 01774
 Kendo 01163
 L&S Electronic 00808, 00865
 LG 01840, 01305, 01423, 02182, 02358, 00178, 00037, 02065
 Luxor 01163
 Matsui 00443, 00744
 Medion 00808, 01248, 01667
 Metz 01163
 Micromaxx 00808
 Microstar 00808
 Myrica 01298
 NEC 00170
 Neovia 00865
 Nordmende 01308
 Orion 00443, 01196
 Panasonic 01636, 00650, 03825, 01650
 Philips 00556, 01887, 00639, 01744, 01506, 01798
 Phocus 01308
 Pioneer 01457, 01260, 00679, 01636
 Pragma Digital 00808
 Prima 01196
 Quasar 00865
 Relisys 00865, 01585
 Revox 00808
 Samsung 02051, 01458, 02094, 00812, 02103, 01249, 03975, 01312, 02953, 00618, 00170
 Sanyo 00170
 SEG 01163
 Sharp 01586, 00093
 Sliding 00865
 Soemtron 01298, 00865
 Sony 01551, 01625, 01651
 SR Standard 01709
 Sunkai 00865
 SVA 00865
 TCM 00808
 Tech Line 01163
 Techwood 01163
 Telefunken 01556
 Tevion 01298, 01248, 00808, 01645
 Thomson 00625

Toshiba 00650, 01508, 02598
 UMC 02165
 United 01163
 Universal 00037
 Universum 01163, 00808
 V2max 00865
 Vestel 01585, 01667, 01163
 Vistron 01363
 Vivax 01308
 Vivid 01308
 Walker 01163, 01149
 Wilson 00556
 World-of-Vision 01298
 Xenius 00661, 00634
 Xiahua 01196
 Xococo 01196
 Xogego 01196
 Yamaha 01576, 00650
 Zenith 00178

**Plasma/Digital Terrestrial/Cable
 Combination**

Samsung 02051, 03975

**Plasma/Digital Terrestrial
 Combination**

Gorenje 01585
 Hisense 02037
 Hitachi 02207
 ITT 01694
 Ministry Of 01667
 Sound
 Philips 01506
 Prosonic 01523
 Relisys 01585
 Sony 01625
 Vestel 01667

**Plasma/Digital Terrestrial/PVR
 Combination**

LG 01840, 01423

Plasma/PVR Combination

Hitachi 02207

**Plasma/SAT/Digital Terrestrial
 Combination**

Pioneer 01457

**Plasma/SAT/Digital Terrestrial/
 Cable Combination**

LG 01840
 Samsung 02051

Plasma/SAT/Digital Terrestrial/Cable/PVR Combination	AEG	01556, 01163, 01324	Brinkmann	00486	Epworth	00701	Hinari	00009, 00037	00009	
Panasonic 01636, 03825	Aiwa	00701	Brionvega	01608	Erisson	01682	Hisawa	00714	Lodos	01037
	Akai	00480, 00361, 00715, 00714, 00037, 01326, 00208, 00606, 01652	Bush	01037, 01652, 00714, 00668, 00037, 00556, 01556, 01916, 00009, 02007, 00443, 00661	Europa	00037	Hitachi	00744, 01037, 00578, 00634, 02676, 00499, 01576, 00037, 01137	Loewe	00512, 00633
Portable LCD/Digital Terrestrial Combination	Sony	01825			Excello	01037, 01326		00578, 00634, 02676, 00499, 01576, 00037, 01137	Luma	01037
					Exquisit	00037		01576, 00037, 01137	Lumatron	00668
Portable TV					Ferguson	00625, 00335, 01037, 00560, 00443, 01882, 00037, 00195	Höher	00714, 01556	Luxor	00361, 01037
Philips	00556		Camper	00037, 00486			Home	00606	Madison	00037
SEG	01163		Carad	01037, 00668	Fidelity	00512	Electronics		Magnum	00714, 00037, 00715
			Carena	00037	Finlandia	00346	Huanyu	00374	Manesth	00037
PVR			Cathay	00037	Finlux	01667, 00346, 00714, 02676, 00037, 00556, 00715, 01556	Hypson	00556, 00714, 00715, 00486, 00668, 01037	Manhattan	00037, 01037
Arçelik	03433		Centrex	00826				00715, 00486, 00668, 01037	Marantz	00037, 00556
Philips	03614		Centrum	01037	Firstline	00715, 01556	Hyundai	01326	Mark	00037, 00714, 00715
Sony	02778		Cimline	00009			Ideal	01556	Mascom	01556
Xoro	03067		Cinex	01556			Imperial	00037	Masters	00037, 00499
			Classic	00499			Indiana	00037	Masuda	00009
Rear Projection TV			Clatronic	00714, 01324			Interfunk	00037	Matsui	02007, 00443, 00009, 00037, 00208, 00714, 00195, 01037, 00035, 00556, 01556
Akai	02532		Clayton	01037			Ingenel	00714, 01324		
Epson	01290		CME	00037, 00361, 00512, 00009, 00035, 00226			Inno Hit	01037	Maxim	00714, 01037, 00668, 01437, 00698, 00808, 01137, 01248, 01556
JVC	00653, 01774						Inspira	01556	Medion	00714, 01037, 00668, 01437, 00698, 00808, 01137, 01248, 01556
Pioneer	00679		Condor	00009, 00037			Interfunk	00037, 00361, 00512		
Samsung	01249, 00812, 02532, 02953, 00618, 01312		Conrac	00808	Gaba	01037	Internal	00556, 00624		
			Contec	00009, 00037	GEC	00037	Intervision	00037		
Sanyo	00208		Crown	00037, 00714, 00009, 00208, 00486, 00668, 00715, 01037, 02200	Geloso	00009	ITT	00361		
Seiko Epson	01290				Goldfunk	00668	ITT Nokia	00361		
Sony	01625, 01651, 01825, 01505				GoldStar	00714, 00037, 00606, 00715	JMB	00634, 00443, 00556, 00499	MEI	01037
Telefunken	01882		Curtis	01326			JVC	01774, 00653, 02943, 02118, 00606, 01601, 00093, 00650	Meletronic	00346, 00480, 00009, 00195, 00634, 00361, 00374, 00512, 00661, 00714, 01652
Thomson	01882, 00625		Daewoo	00634, 00661, 00499, 03110, 00374, 00624, 00556, 00037, 00451, 00009, 00037, 00208			Karcher	01556, 00606, 00714, 01324		
Toshiba	01508, 02598, 03323, 03130, 02775						Kathrein	00556	Memorex	00463, 01037
			Dansai	00037, 00208			Kendo	01037, 01437, 00037, 01137, 02138	Metronic	00625
Rear Projection TV/Digital Terrestrial Combination			Dantax	01037, 00714, 00715, 01652, 01667			Grandin	00714, 01037, 00715, 00037, 00556, 00668, 01652	Metz	00746, 00447, 01037, 01533
Sony	01625, 01825							00715, 00037, 00556, 00668, 01652		
Toshiba	03323							00556, 00668, 01652	Micromaxx	00714, 01324
			De Graaf	00208				00556, 00668, 01652	Mikomi	01667
SAT/Digital Terrestrial Combination			DEC	01326				00195, 01223, 00580, 00191, 00443, 00556, 01308, 02007, 02890, 03262, 00587, 00706, 02663	Minato	00037
Grundig	02663		Decca	00037	Grundig	00195, 01223, 00580, 00191, 00443, 00556, 01308, 02007, 02890, 03262, 00587, 00706, 02663	Kneissel	00499, 00037, 00374, 00556	Mitsai	01556
			Desmet	00037				00374, 00556, 00009	Mitsubishi	00108, 00512, 01037, 00037, 00556
SAT/PVR Combination			Dixi	00037				00009, 00037, 00714	Electric	01037, 00037, 00556
Grundig	03433		Domeos	00668				00009, 00037, 00714		
			Dual	01037, 01137, 00714, 01667				00714	Mivar	00609
Satellite			Durabrand	01437, 00714, 01037, 01652				00714	MTC	00512
B & O	00565							01037	MTlogic	00714
Bang & Olufsen	00565		D-Vision	00037, 00556				00037	Multitec	01037, 01556
Grundig	00195		Dynatron	00037				00037	Myryad	00556
Philips	00556		E: max	01324				00714, 01149, 01423, 00178, 00556, 00698, 01840, 01305, 00668, 01037, 00714, 01137, 00009	NAD	00037
Toshiba	00035		Elbe	00556				01423, 00178, 00556, 00698, 01840, 01305, 00668, 01037, 00714, 01137, 00009	Naiko	00037, 00753
			Elfunk	01208	Hantarex	00420, 00009			NEC	00170
Television			Emerson	00486, 00668, 00714	HB	00714, 01324			Neckermann	00556, 00191
A.R. Systems	00374				HB Ingelen	00714, 01324	Lifetec	00714, 01137, 00009	NEI	00037, 01037
					HCM	00009			NEO	01324

Neufunk	00714	Profilo	01556	Shivaki	00037	00508, 02775,	Beko	02200, 01308,	Logik	02486, 03428,
New Acoustic	00037	ProLine	00634, 00625,	Siemens	00195, 00037,	03130, 00618,		01652		03005, 03802
Dimension			00037, 01037		00191	00767, 01037,	Belson	02868	Logix	03465
Nikkai	00037, 00035	Prosonic	00714, 00606,	Siera	00556	00195, 02676,	Blaupunkt	03465	Luxor	02676
Nikkei	00714		01324, 01667	Silva Schneider	00037, 01556	03323	BlueDiamond	03465	Matsui	02486
Nokia	00480, 00361,	Protech	00037, 00668,	SilverCrest	01037		BuBuGao	02530	Medion	02676, 01585,
	00606, 00346		00009, 01037	Sliding	01324	TRANS-	Bush	03790, 03589,		02239, 03067
Nordmende	00560, 01882,	Pye	00037	SLX	00668	continentis		01667, 02053,	Miia	02868
	00714, 01163	Quadro	00753, 01326	Sogo	00606	Uher		02530, 02676	Mikomi	01585
Nortek	00668	Quelle	00512, 00037,	Sonitron	00208	United		02676	Mystery	03296
O.K.Line	01324, 01037,		00361, 01037	Sonoko	00009		Celcus	02676	Neon	02673
	01556	Radiola	00037, 00556	Sonolor	00208	Universum		03434	Odys	02457
Oceanic	00361	Radiomarelli	00037	Sony	01651, 00651,		CHL	03067	OK.	03802, 02676,
OK Line	01324, 01037,	Radionette	00714		01551, 01505,		CMX	02868, 03296,	Orion	03434, 03047
	01556	Radiotone	00668, 00037,		02585, 01825,			03067		02005, 02108,
Okano	00009		01037		02778, 01625		Daewoo	03110, 02246		01037
OKI	02200	Redifusion	00361, 00346	Soundwave	00037, 00715	Vanguard	Dantax	02676	Panasonic	01636, 03825,
Onimax	00714	Reoc	00714	SR Standard	00009, 00374	Venus	Denver	01770, 03067		01650
Opera	00714, 01308	Revox	00037	Starion	01037	Vestel	Digitrex	03067	Panavideo	03825
Orava	01149	Roadstar	01037, 00009,	Strato	00009	Videocon	DMTech	03480	PEAQ	03649
Orion	02007, 00443,		00714, 00668,	Strato	00009	Visa	Donghai	02832	Philips	02800, 02768,
	00655, 00714,		00715	Sunny	00037		Dual	02197, 02676		03614, 01506,
	00037, 00556,	RTF	00037	T+A	00447		Dyon	02530		01887, 02374,
	01916, 02032	Saba	00625, 00560,	Tatung	00037, 01324,	Vision	Electrolux	01585		01744
Otto Versand	00512, 00037,		01882, 00335,	TCL	01556	Vivax	e-motion	02426, 01645,	Pioneer	01457
	00191, 00556		00714	TCM	00714	Voxson		03465		02676, 03296
Pacific	00714, 00443,	Saivod	01037, 00668,	Tec	00037	Waltham	Essentials	02486	Polaroid	02676, 03480
	01037, 01137,		00037, 01556	Tech Line	01437	Watson	Evotel	03589	Prosonic	02165, 02239
	00556, 01324	Salora	00361, 00480	Technicolor	01882		F&U	02676	Reflexion	02676, 02001,
Palladium	00655, 00714,	Samsung	00618, 01458,	TechniSat	00655, 00556	Welltech	Ferguson	02053, 03455,	Salora	02125
	00037, 01137		00587, 02051,	TechniSat	00714, 01652	Wharfedale		02339		02676, 01667
Panasonic	01650, 01968,		01249, 00037,	Technisat	00714, 01652		Finlux	02676, 01667	Samsung	02051, 03975,
	00650, 00226,		00556, 00009,	Technisat	00714, 01652		Fisher	01585		00812, 02953
	01636		00812, 01312,	Techwood	01037	White	Funai	01817	Sanyo	02676, 01585,
Philips	00556, 00037,		02103, 02953	Tecmagen	00556	Westinghouse	Funai United	02676		01208, 02279
	02660, 01887,	Sansui	00655, 00706	Telefunken	00625, 00560,	Wilson	Goodmans	01523, 02053,	SEG	01523, 02673,
	01798, 02485,	Sanyo	01208, 00208,		01882, 00335,	Windsor		02676		03434
	02374, 02813,		01362, 03096,	Telestar	00556	Windy Sam	Gorenje	02676	Sharp	02951, 02676,
	01744, 03614,		02676, 01585,	Tensai	01037	Xiron	Grundig	03433, 01523,		01659, 03287
	01506, 01867,		01149, 01037	Tesla	01137, 01037,	YU-MA-TU		02053, 01223,	Shivaki	02197
	00639, 00512,	SBR	00556		00037, 00556,			02200, 02125	Sony	02778, 01651,
	02800, 00374,	Schaub Lorenz	00714, 00361,		00714, 01652	TV/Digital Terrestrial	Haier	02530, 03790		02585
	02015		01324, 00374,	Tevion	00714, 01137,	Combination	Hannspree	03430, 02786	SOVOS	02239
Phocus	00714, 01652		00486, 00606		01037, 00556,	Acer	Hitachi	02676, 01585,	Sunstech	02530
Phoenix	00037	Schneider	01137, 00037,		00668, 01556	Acoustic		02127	TCL	02675, 03047
Phonola	00037		00714, 01037,	Thomas	00625	Solutions	Humax	01295	Teac	03005
Pilot	00706		00556, 00668	Thomas America	00625	AEG	Isis	02676	Technica	03465, 02168
Pioneer	00679, 00037,	Schönteck	01037	Thomson	00625, 01882,	Akai	Jay-tech	03067	Techwood	02676, 01667
	00361	Seaway	00634		00560, 03047	Akura	JMB	02426	Tesco	02426
Pionier	01556	Seelver	00556, 01037	Thomson Life	01882	Alba	JTC	03067	Tevion	02339
Playsonic	00714, 01652,	SEG	01037, 00668,	Thorn	00035, 00499,		JVC	03067, 03005,	Thomson	02675, 03971,
	00037, 00715		01163, 01437		00361, 00512		Kendo	02676		03047
Policom	00361	Sencor	00714	Tokai	00037, 00668,	Andersson	Kogan	03296	Toshiba	03323, 02676,
Powerpoint	00037	Sentra	00035		01037	AOC	Lenco	02676		01508, 02598
Prinston	00715	Sharp	00093, 01193,	Tokaido	01037	AS	LG	01840, 01423,	UMC	02168, 02426,
Pro Vision	00714, 01324		03119, 01586,	Toshiba	01737, 01508,	Audiosonic		02182		03465
Profex	00009, 00361		02951		00035, 02598,	Axdia	Linsar	02676	United	03233, 02799,
						BBK	Loewe	01884		03480, 02530

Venturer	03005	iPure	01376	02426, 02106,	Grundig	02890, 03433	Metz	01533	Bang & Olufsen	00565, 00620
Videocon	03296	Jay-tech	03067	01849	Haier	02530	Minerva	01248	GoldStar	00037
Wharfedale	01983	JTC	03067	01037, 00587,	Hannspree	03430	Orion	02108, 02000,	Grundig	00191, 00195
Xenius	01667	JVC	02714, 03874	01983	Hitachi	02676, 02207		02005	JVC	00606
Xoro	03067	Kenmark	02637	01545, 01865,	i-Joy	02713	Panasonic	01636, 03825,	Mitsubishi	00108
		Lenco	00587, 01983	03005	Isis	02676		01650	Electric	
TV/DVD Combination		LG	01423	01037	Kogan	03296	Philips	02800, 03614	Panasonic	00650, 00226
Acoustic	01545, 01865,	Linsar	02676	03296	LG	01840	Pioneer	01457	Philips	00037, 00639
Solutions	02279	Logik	02486, 03005,	02284	Linsar	02676	Samsung	02051, 03975	Sanyo	00208
AEG	02239		01037, 03428	01037	Loewe	01884	SEG	03434	Sharp	00093
Akai	03067	Luxor	01037	01983	Logik	02486, 03428,	Sharp	02951, 01659	Siemens	00195
Akura	02289, 01983	Marks &	01770, 02246	01983, 01037		03802	Sony	02778, 01651	Sony	00651, 01651
Alba	03587, 03067,	Spencer				03465	Technosonic	02032		
	03005, 00587,	Matsui	02279, 02486,		TV/DVD/Digital Terrestrial	02486	Tevion	02373	Video Monitor	
	01865, 02676		01037, 02676		Combination	01741	Toshiba	03323, 01508,	LG	01423
AS	01545, 01865,	Medion	02719, 02676,	02279	Orion	02000, 01037		02732	Philips	00556
	02279		02279		Waltham	01037				
Axdia	02719, 02457	Mx Onda	01983				Mystery	03296	Video Projector	
Baier	02239	Neon	02673		TV/DVD/SAT Combination		Neon	02673	Acer	01644
Belson	02241	Odys	02719, 02457	02426	e-motion	02426	OK.	03802	Epson	01290
Black Diamond	01037	OK.	03434, 03802	02197	Hantarex	02197	OKI	02676	Sanyo	01649
Blue Sky	01037	OKI	02676	01849	Swisstec	01849	Orion	02676	Bang & Olufsen	00565
Bush	03005, 01983,	Onn	02279	02426	Technica	02426	Panasonic	01636, 03825	Blue Sky	00624, 01916
	02676, 00698,	Onyx	01770	01849	UMC	01849	PEAQ	03649	Bush	01916, 00374
	02719, 01037,	Orava	01037				Philips	02660, 03614,	Daewoo	00624
	01556, 01865,	Otic	01983		TV/PVR Combination			01867, 02374,	Dantax	01916
	02059	Philips	02015, 00556	02530	AEG	02530	Polaroid	02813	Epworth	01916
cello	02673, 01770	Polaroid	01523	03067	Akai	03067	Prosonic	03296	Ferguson	00625, 01916
Centrum	01037	Powerpoint	00698	03268	Akura	03268	Rolsen	02676	Firstline	00624
CMX	03296, 02868	ProLine	01545, 02135	02676, 02561	Alba	02676, 02561	Samsung	02051, 03975,	Goodmans	01916, 00624
Conia	02410	Prosonic	01865, 02676,	02676	Andersson	02676		00009, 00587,	Grandin	00624
Crown	01037		02001, 02197	03067	Audiosonic	03067		00812, 01235,	Grundig	00037, 00195,
Daewoo	02246	Q.Media	02339	02530	BBK	02530		01249, 01312		00556, 01916
Denver	00587, 01770,	Salora	02197	02868	Belson	02868	Sanyo	02676	Internal	00624
	02197, 03067	Sanyo	02676	03465, 02426	Blaupunkt	03465, 02426	Sharp	02676, 01659	LG	00178
DGM	02239, 02718,	Scott	01983	03465	BlueDiamond	03465	Sony	02778	Matsui	01916
	02059	SEG	02673, 02719,	02530	BuBuGao	02530	Sunstech	02530	Mitsubishi	00556
Digitrex	03194		01037	03589, 03964,	Bush	01037	TCL	03649, 02675	Electric	
DMTech	02001	Sens	01865	02530, 02676		02530, 02676	Technica	03465	Orion	01916
Dual	02241, 01037	Sharp	02676	02673	cello	02673	Technika	02426	Pacific	01916
Dyon	02457	Sony	02778	03434	Changhong	03434	Tevion	03465, 02426	Philips	00556, 00037
Eifunk	01037	SOVOS	02239	03067	CHL	03067	Thes	02947	Radiola	00556
Essentials	02486	Supratech	02208	02868, 03296,	CMX	02868, 03296,	Thomson	02675, 03649	Roadstar	01916
Evotel	02559	Sweex	02284	02799, 02832,		02799, 02832,	Toshiba	03323, 02676	Schneider	00556, 00037
Ferguson	02637, 03455,	Tauras	02197	03067		03067	UMC	02426, 03465	SEG	00624, 00634
	01037, 02339	Teac	02168, 03005,	02486	Currys	02486	Unicom	03465	Sharp	00093
Finlux	01556		02714		Essentials		Videocon	03296	Siemens	00195
Gold	01770	Technica	01037, 02426	02559	Curtis	02559	VisionPlus	02426	Sony	00651, 01505,
Goodmans	01983, 01037,	Technika	01983, 02426,	02718	DGM	02718	Xoro	03067		01651
	01687, 02676		01865, 02106,	03067, 03194	Digitrex	03067, 03194			Tatung	01916
Gran Prix	02333		03005	02832	Donghai	02832	TV/SAT Combination		Technics	00556
Grundig	02125, 02663,	Teletech	01037	02530	Dyon	02530	Changhong	03434	Thomson	00625
	02239, 02127	Tevion	02241, 02339	03465, 02426	e-motion	03465, 02426	Grundig	02125, 03433	Toshiba	01916
Hanseatic	02001	Thomson	00625	02486	Essentials	02486	Hitachi	02676	United	01916
Hikona	01983	Toshiba	03323, 02732,	02561, 03589	Evotel	02561, 03589	LG	01840, 00037		
Hitachi	02676, 01037		02775, 02676	02676	Finlux	02676	Loewe	01884	VCR	
Imperial	02339	UMC	02168, 02059,	02676	Goodmans	02676	Logik	03005	B & O	00565, 00620

Grunkel	21316, 21493	Oppo	22545	Technics	20490	Toshiba	22705	Digital Terrestrial/PVR Combination	Axxion	23076	
H & B	20841, 20850	Panasonic	23580, 24190,	Yamaha	20545	Yamaha	23871	Panasonic	23580	Basic Line	20713
Hitachi	20664		23862							BBK	21224
ITT	21233	Philips	22789, 21849	Blu-ray						Beko	20831
Kenwood	20490	Pioneer	22847, 21809,	Ambiance	23052	Blu-ray Home Cinema		DVD		Bellagio	21004
Kiss	20841		23041, 22854	BBK	23527	Harman/Kardon	23744	3D LAB	21549	Belson	21630, 21493
Leiker	20872	Sony	21516	Bluetech	23542	Panasonic	23901, 23230,	Acoustic Solutions	20730, 21316,	Belsonic	21493
LG	20869	Toshiba	22705	BuBuGao	23527		23935, 23642	20713, 23021	20713, 23021	Berthen	21643
Matsui	20672	Yamaha	23871	Bush	22723	Pioneer	21809, 21997,	Advance	21549	Best Buy	22163
Mustek	20730			Cambridge	22808		22854	Acoustic		BIOSTEK	22630, 21601
Muvid	22173	3D Connected Blu-ray Home Cinema		Audio		Samsung	22951, 22873,	AEG	20788, 21643,	Black Diamond	20713
NAD	20741			Dyon	23052		23467		22173, 20770,	Blu:sens	21233
Nevir	20831	Harman/Kardon	23744	Foehn & Hirsch	23052	Sony	22504, 23964,		21233, 22235	Blue Sky	20713, 20672,
New Acoustic	20741	LG	22811, 23996,	Funai	20675		22020, 21516,	AFK	21051, 21152	20651, 20695	
Dimension			21602	Grundig	22723		22132	Airis	20672, 21005,	Boghe	21004
Olidata	20672	Panasonic	23901, 23935	Harman/Kardon	23744	Blu-ray Recorder/Digital Terrestrial/PVR Combination			21224	Boman	21005, 20898
Oritron	20651	Philips	21849, 23147,	Hiteker	23052	Samsung	23195	Aitro	22095	Bork	21152
Pacific	20831		22789	i-Joy	23052			Aiwa	20533	Brainwave	20770, 21115
Panasonic	20632	Pioneer	21809, 21997,	Lenco	23052			Akai	21115, 20898,	Brandt	20651, 20551,
Philips	21354, 20539,		22854	Lexicon	22547				21233, 20788	20503	
	20675, 22049,	Samsung	22951	LG	22547	Blu-ray/Digital Terrestrial/Cable/PVR Combination		AKI	21005	BuBuGao	21224
	22056	Sony	22504, 23964		21602, 20741,	Panasonic	23580	Akira	21620, 23076	Bush	20713, 20730,
Pioneer	20631, 20632				22811, 24090,	Samsung	23195	Akura	20898, 21051,	20831, 21140,	
Roadstar	20713, 21051	3D Connected Blu-ray Recorder/Digital Terrestrial/Cable/IPTV/PVR Combination		Limit	23996				21140, 21233,	21051, 21351,	
Samsung	22369			Logik	23052			Blu-ray/Digital Terrestrial/PVR Combination	21493, 21624	23021, 20672	
Seeltech	21643	Panasonic	23580	Magnavox	20675			Freesat	22867	21109, 21471	
Silva Schneider	20831			Marantz	23444					Cambridge	
SilverCrest	22173	3D Connected Blu-ray Recorder/SAT/PVR Combination		Medion	23542					Audio	
Sistemas	20672			Momitsu	23052			Blu-ray/VCR Combination		Campomatic	21051
SM Electronic	20730	LG	24090	OK.	22723			Panasonic	21641	Digital	
Sony	20533, 21633	Sagemcom	24190	Onn	22723					CCE	20730
Starlogic	21005			Oppo	22545, 22546,			Camcorder		Centrum	20713, 21005
Starmedia	21005				22547			Sony	20533	CGV	21115
Technics	20490	3D Connected Blu-ray/Digital Terrestrial/Cable/PVR Combination		Panasonic	21641, 23862,					Chili	21493
Technika	23633				23580, 23901,			CD		Cinea	20841
Telefunken	23076				23230, 22061,			3D LAB	20539	Cinetec	20713, 20872
Tevion	21036, 21382				22062, 23641,					CJ Digital	21643, 22173
Thomson	20522	Samsung	23195, 20199		23935, 23642,			Connected Blu-ray		Classic	20730
Toshiba	20503				22678, 22584,			Grundig	22723	Clatronic	20672, 20788,
TRANS-	20831	3D Connected Blu-ray/Digital Terrestrial/PVR Combination		PEAQ	22710			LG	21602, 24090,	21233	
continents				Philips	23527				22811	Clayton	20713
Vecatech	21493				22789, 21849,			Panasonic	23580, 23862,	CMX	22630, 21601,
Venturer	20790	3D Connected Blu-ray/SAT/Digital Terrestrial/PVR Combination			22434, 23147,				23641, 22678,	23076, 21643	
Wilson	21233				22084, 22689				24190, 22584	Coby	21351
Yamada	20872, 21004,			Pioneer	21809, 22442,					Codex	21233
	21493				22847, 21997,			Connected Blu-ray Recorder/Digital Terrestrial/PVR Combination		Compacks	22235
Yamaha	21354				22854			Panasonic	23580, 22678,	Contel	20788
					20199, 23195,				22867, 24190	Continental	20831, 20872
3D Connected Blu-ray DVD player					22951, 22873,					Edison	20713, 20770,
Bush	22723				20298, 23467					Crown	21115
Cambridge	22808	Audio Receiver		Sherwood	23052					Curtis	22235, 21493,
Audio		Denon	21844	Sony	21516, 22020,						23052, 21624
Electrocompanie	22545	Marantz	20539		22504, 23964,			Digital Media Receiver		Cybercom	20831
t		Panasonic	21908		20772			Kiss	20396	CyberHome	20816, 21023
Grundig	22723	Philips	20539	Sylvania	20675					Cytron	20651
Marantz	23444	Sony	22132	Technika	23527					Daenyx	20872
										Daewoo	20770, 20872

DAK	22235	Funai	20675, 20695	Jamo	21036	Metz	20713, 20525, 20571	21531, 20525, 20631, 20632	SEG	20713, 20768, 20872	
Dalton	21036	Gericom	21004	JDB	20730						
Dansai	20770, 21115	Germatic	21051	JMB	20695	Micromega	21005, 20539	Play It	21643	Shanghai OCN	20672
Dantax	20713, 21224	Global Solutions	20768	JVC	20623, 22868	Microstar	20831	Plu2	20850	Sharp	20630, 20713, 20675
Daytek	20872, 21005	Global Sphère	21152	jWin	21051	Minax	20713	Powerpoint	20872, 21005		
Dayton Audio	20872	GoGen	22139	Kansas	21233	Minoka	20770, 21115	Prinz	20831	Sherwood	20741
DCE	20831	Gold	21601	Technologies		Mitsubishi	20713	Prism	20831	Siemssen	21382
Decca	20770, 21115	GoldStar	20741	Kazuki	21493	Electric		Pro Vision	21493, 20730	Sigmathek	21224, 21005, 21620
Denon	21634, 20634, 20490, 21844	Goodmans	20713, 20730, 20790, 21004, 21152, 20651, 21140, 21316, 21530	Kendo	20713, 20831, 20713, 20770, 20898	Mizuda	20770	ProLine	20651, 21004, 20672, 21316, 21643	Siltex	21224
Denver	22736, 20672, 21601, 20898, 21316, 21493, 20788, 21643			Kenwood	20490	Mustek	20730, 21601			Silva	20788, 20898
Dgtec	20672	GoWell	21643	Keymat	21316	Muvid	22736, 21643, 22173, 21493	Proson	20713	Silva Schneider	20831, 20898
Dicra	22173	GPX	22235	KeyPlug	21643			Pye	20539	SilverCrest	21152, 21643, 22173
Diffrnce	22235	Gran Prix	20898, 20831	Kiirro	20770	Mx Onda	20651, 21601	QONIX	21051		
Digihome	20713	Grandin	20713, 21233, 22173	KingVision	21493, 21620, 21643	Mystral	20831	Radionette	20741	Sinudyne	21316
DigiLogic	20713			Kiss	20841	NAD	20741	Radiotone	20713	Sistemas	20672
Digital	22173	Grundig	20775, 20539, 20695, 20670, 20790, 20651, 20713, 21004, 21036, 21643, 20770, 21316, 20831, 21493	Koss	20651	Naiko	20770, 21004	RCA	20522	Skantic	20713
Digitrex	21004			Lawson	20768	Naxa	22235	Red	22235	Skymaster	20730, 20768
DiK	20831			Lazer	22173	Neom	21493, 21643	Red Star	20770, 20898, 20788, 21351	Skyworth	20898
Dinamic	20788	Grunkel		LC Power	21493	Nevir	20831, 20770, 20672	Reoc	20768	SM Electronic	20730, 20768, 21152
Disney	20831			Leiker	20872	New Acoustic	20741	Revoy	20841	SM Supervision	20768, 21152
DK Digital	20831, 22095, 21643	GVG	20770	Lenco	23076, 20713, 20770	Dimension		Richmond	21233, 21549	Smart	20713
DMTech	22173	H & B	20713, 21233, 20841, 20850, 22173	Lexia	20768	Nikkai	22836	Roadstar	20713, 20730, 20672, 20898, 21051	Sogo	20672, 21493
Dragon	20831			LG	20741, 20591, 20869, 21602	Nikkei	20898	Ronin	20872	Sony	21633, 20533, 21533, 21548, 21033, 20772, 21070
Dual	20831, 20730, 20713, 20651, 21023	Hanseatic	20741	Lifetec	20831	Noblex	23076	Rotel	20623	Sound Color	21233
Durabrand	20831, 22284, 20713, 21023	Harman/Kardon	20702	Limit	20768	Nordmende	20831, 21316	Saba	20551, 20651, 21601, 21643, 22173	Soundmaster	20768
D-Vision	21115	HB	20788	LiteOn	21738	Nordy	22235	Saivod	20831	SR Standard	20768, 20788, 20831, 20898
Dyon	23068, 23076	HB Ingelen	20788	LM	21643	Nortek	21643, 22173	Salora	22173	Star Clusters	21152
E:max	20770, 21233, 21643, 22173	HCM	20788	Lodos	20713	Oasis-Media	21601	Samsung	20573, 22843, 23266, 22369, 20744, 22556, 20199, 21635, 20490, 21075, 22765, 22942, 23195	Starmedia	21005, 21224, 21601
eBench	21152	HE	20730, 21493	Loewe	20539	OCN	20672			Stein	21152, 21382
Ecron	21630	Henß	20713	LogicLab	20768	OK	23076			Strato	20713
E-Dem	21224	Hitachi	20664, 20573, 20713	Lumatron	20713, 21115	Olidata	20672			Strong	20713
Elfunk	20850	Hiteker	20672	Luxor	21004	Onkyo	20627, 20503, 21769			Sunkai	20770
Elin	20770	Höher	20713, 20831, 22173, 20651, 21004, 21224, 21643	Magnavox	20675, 20539, 21354, 20713	Orion	20695, 21233			Sunstech	20831, 21601, 21620, 21630
Ellion	20850			Magnum	21152, 21382	Oritron	20651			Sunwood	20788, 20898
Elta	21115, 20788, 22173, 20672, 20770, 21643, 22630, 20850, 21051, 21233, 21620, 21624	Home Electronics	20730, 20770	Majestic	21620	Ormond	20713	Sansui	20768, 21549	Superior	23076, 22173, 21643
Eltax	21620, 21624	Home Tech	21224, 21643	Manhattan	20713	Pacific	20831, 20713, 20790, 20768	Scan	20850	Supervision	20768, 21152
Epworth	20533	Industries		Manta	21493	Packard Bell	20831	Schaub Lorenz	20730	SVA	20672
EuroLine	20788, 21115, 21233, 21351	HotMedia	21152	Marantz	20539	Palladium	20695, 20713			Synn	20768
Fenner	20651	HYD	21233	Mark	20713	Panasonic	20490, 21641, 21579, 20632, 22710	Schneider	20788, 22173, 20770, 21115, 21643	Sytech	21601
Ferguson	20898, 20651	Hyundai	21493, 20850	Matsui	20651, 20695, 21316, 20672, 21004			Schaub Lorenz	20788, 22173, 20770, 21115, 21643	Tandberg	20713
Finlux	20770, 20591, 20672, 20741	Ingelen	20788	Maxim	20713, 20872	peeKTon	22100, 22385, 21224, 20898			Targa	20741
Firstline	20713	Ingersoll	21023	MBO	20730	Philips	22056, 21354, 20539, 22695, 22926, 22371, 21846, 22334, 20646, 23353, 23004, 20503	Scientific Labs	20768	Tatung	20770
		Inno Hit	20713	MDS	20713			Scott	20672, 21005, 21036, 22173, 20651, 21233, 21630	TCM	20790
		Irradio	21233, 21115, 21224	Mecotek	20770			Seeltech	21224, 21643	Teac	20571, 20768
		ISP	20695	Medion	20831, 20651, 22425, 20630, 21382, 21549					Tec	20898
		ITT	21233	Memorex	20831					Technics	20490
										Technika	21115, 20770, 20831, 23429, 23633, 21316

	21158, 22049, 22511, 20539, 22371	DVD-R/PVR Combination Acoustic 21530 Solutions
Pioneer	20631, 21768, 22279	Amitech 20122 AS 21530
ProLine	21738, 22382	Digitek 20122
RCA	20522	Ellion 20122
Sansui	20122	Funai 20675
Sanyo	20670	GPX 20741
Schneider	20646	Grundig 21416
Sharp	20675, 20630, 20713	H & B 20122 Hyundai 21530
Sylvania	20675	JGC 21530
Techwood	21530, 22382	LiteOn 21416, 21738, 21644, 21158
Telefunken	23076	Logik 22382
Thomson	20551	Medion 22076, 20741, 21644
Vestel	21530	Neon 20122
Waltham	21530	Nordmende 21530
Yamada	21416, 21158	ProLine 22382
Yamaha	20646, 21840	Prosonic 21530
		SEG 21530
DVD-R Home Cinema		Sencor 20122, 23086
Philips	21846	Silva Schneider 20741
		Sky Media 20122
DVD-R/Digital Terrestrial Combination		Sony 22861, 21033, 21070, 21536, 22839, 21540, 22132, 21516, 21633
GoGen	23076, 23086	Soundwave 21530
Samsung	22942, 23195, 21635, 22107, 21748, 22833, 22113, 22886, 20490	Targa 20741, 21644, 22076
Sony	22861, 21033, 21070	Tchibo 20741
Wharfedale	22382	Technika 21530
		Techwood 22382
DVD-R/Digital Terrestrial/PVR Combination		Tevion 20122, 22076
Best Buy	24006	Time 20122
Panasonic	21579, 23580, 22678, 22710, 20490, 23583, 21661, 22867, 21638, 22584,	Toshiba 22682, 21510, 20503, 21639
Samsung	23195, 21635, 22942, 22833, 22107, 21748, 20490, 22886	Unimade 20122
Toshiba	22682, 21510, 21639	Universum 20741, 21530
Wharfedale	22382	Wharfedale 22382
		Yamada 21416
DVD-R/Digital Terrestrial/PVR Home Cinema		DVD-R/PVR Home Cinema
LG	22407, 20741	LG 22407, 20741
		DVD-R/SAT/PVR Combination
		Panasonic 22710, 21579

DVD-R/VCR Combination
AEG 20675
Agfaphoto 21436
Bush 21436, 21530
Daewoo 21436

Dual	21436
Grundig	21436, 21416
LG	20741, 20869, 22135
Magnum	21436
Pye	20675, 20646
Tech Line	21436

DVD-R/VCR/PVR Combination	
Funai	20675, 20695
Toshiba	22682, 20503, 21510

Game Console	
Microsoft	21708, 22083, 22202
Sony	20772, 20533
Xbox	22083, 21708, 22202, 20522

HD DVD	
LG	20741
Microsoft	22202, 21708, 22083
Onkyo	21769
RCA	21769
Toshiba	21769
Xbox	22202, 21708, 22083

Hi-Fi System	
Panasonic	20490, 21908, 24190

LCD TV	
Samsung	20573, 20744, 21635, 21932, 22886, 22951

LCD/DVD Combination	
LG	23308

MD	
Toshiba	22705

Media Center Controller	
Kiss	20396

Mobile DVD	
Panasonic	20490

Portable Blu-ray	
Panasonic	21641

Portable DVD	
LG	20869, 20741, 23308

Panasonic	20490, 21641
Philips	20539
Pioneer	21571
SEG	20872
Sharp	20630
Sunstech	20831
Sytech	20831
Toshiba	20503

Portable LCD/DVD/Digital Terrestrial Combination	
LG	23308

PVR	
LG	23565


TV/DVD Combination	
Alba	20695
Black Diamond	20713
Blue Sky	20713
Bush	20713
Centrum	20713
Crown	20713
Dual	20713, 21115
Elfunk	20713
Goodmans	20713
Grandin	20713
Grundig	20539, 20695
Hitachi	20713
Logik	20713
Luxor	20713
Orava	20713
Philips	20539
Sanyo	20695
SEG	20713
Sliding	21115
Sony	20864
Technika	20713
Teletech	20713
Thomson	20551
Toshiba	20695
United	20713
Universum	20713
Weltstar	20713
Wharfedale	21115
Xiron	20713

TV/DVD/Digital Terrestrial Combination	
Orion	20713, 20695
Waltham	20713

TV/PVR Combination	
Samsung	20573, 20744, 21932, 22886

TV/VCR/DVD Combination	
Ferguson	20695, 20713
Matsui	20695, 20713

Declaration of Conformity

	<p>Declaration of Conformity (Europe Only) This product is in conformity with the Council Directives:</p> <ul style="list-style-type: none">• EMC Directive 2004/108/EC• Low voltage Directive 2006/95/EC
---	--

Notes



©2014 Entone, Inc. Entone, Nova and connecting the home are trademarks of Entone, Inc. Other company, product, and service names may be trademarks or service marks of others. All information contained in this document is subject to change without notice. Information contained in this document is provided on an as is basis. In no event will Entone be liable for damages arising directly or indirectly from any use of the information contained in this document. Subject to change without notice.